


Bez.: Montageanleitung 14


STEP 1.

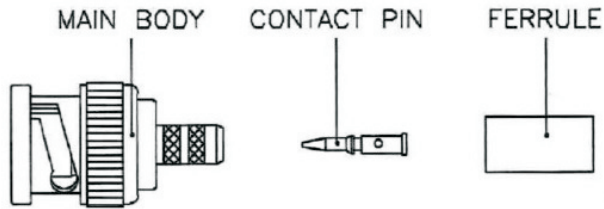


STEP 2.




STEP 3.

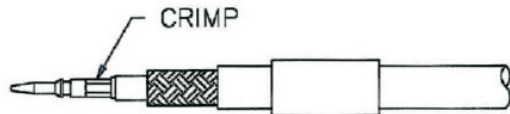

STEP 4.

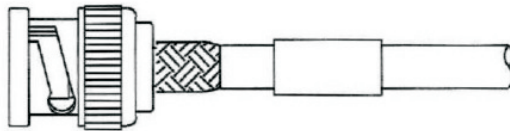

STEP 5.

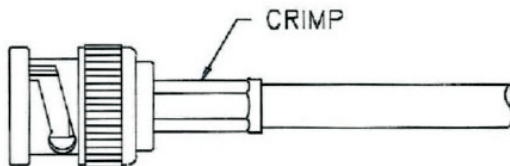

STEP 1.

All parts of the connector are shown. A crimp tool is necessary to complete the termination.

STEP 2.

Strip the cable inner conductor, dielectric, braid, and jacket as per "RECOMMENDED CABLE STRIPPING DIM'S" in catalog.

STEP 3.

Insert inner conductor into the CONTACT PIN and crimp it with the crimp tool as shown. Then slide the FERRULE onto cable.

STEP 4.

Insert the MAIN BODY into braid and dielectric.

STEP 5.

Slide the FERRULE over braid and crimp it with the crimp tool as shown.

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid
Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

