


Cable Assembly Instructions


Step1. CUT CABLE END EVENLY AND PERPENDICULAR.




Step2. SLIDE OUTER FERRULE OVER CABLE END.




Step4. INSERT CONTACT PIN ONTO CABLE'S CENTER CONDUCTORSO THAT IT IS FLUSH TO DIELECTRIC, CRIMP OR SOLDER CONTACT FIRMLY.




Step5. FLARE BRAID END SLIGHTLY.




Step3. STRIP CABLE JACKET, BRAID, AND DIELECTRIC TO SPECIFICATION LENGHS.



Step6. SLIDE CONNECTOR BODY OVER CENTER CONTACT AND. SLIDE OUTER FERRULE OVER BRAID AND UP AGAINST BODY ASSEMBLY.

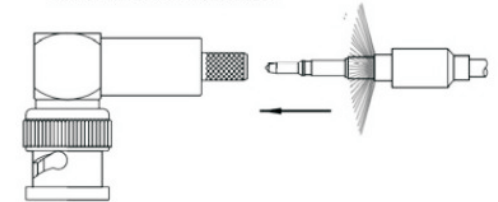

Complete7. CRIMP OUTER FERRULE WITH APPROPRIATE CRIMP TOOL

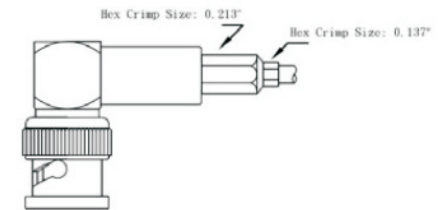

Take the actual assembly as the standard this drawing only provides reference

www.bkl-electronic.de

Technische Änderungen vorbehalten. Ausführungen können variieren. Sollten Sie ein Muster benötigen kontaktieren Sie uns bitte.

BKL-ELECTRONIC Kreimendahl GmbH • Märkenstück 14 • 58509 Lüdenscheid
Tel: +49 (0)2351-3621-0 • Fax: +49 (0)2351-3621-29 • info@bkl-electronic.de

